


Infinity Start System

Replacing the Rechargeable Battery

Place the Infinity Start System unit on a table in a dry location, away from the pool deck.

- 1. With a Phillips-head screwdriver, unscrew the three screws on the back battery cover as shown in the figure at right. Remove the back panel of the Infinity.
- 2. Lift up the battery clip and slide the 12-volt gel-cell battery partway out so you have easier access to the connectors.
- 3. Disconnect the two connectors by wiggling them from side to side while pulling them off of the battery posts.
- 4. Remove the battery.
- 5. Lift up the battery clip and slide the new battery into the chamber with the battery connectors facing the opening. Let the battery clip snap down on to the battery to hold it in place.

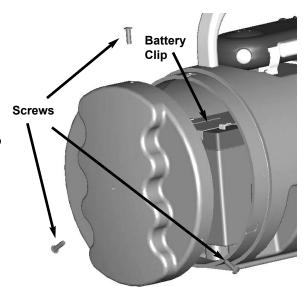

- 6. Connect the colored wire connectors to the corresponding connectors on the battery. Do not pull excessively on the wires or you may dislodge them from the main circuit board.
- 7. Replace the back panel and tighten the three screws to hold the panel in place.

Battery Care Tips

You can extend the usable life of the battery by always keeping it fully charged. Never allow the battery to discharge completely. Leave the Infinity plugged in when not in use, and always make sure the power switch is in the OFF position after every use. If the Battery Life indicator turns red, your battery needs immediate recharging.